NOT FOR GUNERAL TO STANK

BULLETIN No. 1131 ISSUE 1 APRIL 1946

TELETYPE

PRINTING TELEGRAPH SYSTEMS


APPARATUS MOT USED BY
BELL SYSTEM

PARTS

REVERSIBLE TAPE TRANSMITTER (X18 & X19)
(6 UNIT)

MOTOR ARRANGEMENT (A)

X19 SAME AS XIE EXCEPT 111846 COVER OMITTED



Western Liectric Company

82 109

Copyright 1946 by Teletype Corporation

Printed in U.S. A.

TELETYPE

PRINTING TELEGRAPH SYSTEMS

PARTS

REVERSIBLE TAPE TRANSMITTER (X18 & X19)

(6 UNIT)

MOTOR ARRANGEMENT (AJ)

(60 CYCLE, 110 V., A. C. SYNCHRONOUS)

X19 SAME AS X18 EXCEPT 111846 COVER OMITTED





Copyright 1946 by Teletype Corporation

Printed in U.S. A.


ALPHABETICAL INDEX

DESCRIPTION	PAGE NO.	DESCRIPTION	PAGE NO.
Auxiliary Contact (Assem.)	4	Operating Lever (Assem.)	7
Bail (Assem.)	2	Pinion	9
Base - Black Wrinkle	1	Plugs - Cable and Cord	7
Base Plate (Assom.)	1	Power Cord (Assem.)	7
Brackets - Left and Right	3	Resistor	1
Cables	1,7	Snap Panel (Assem.) - Gray Wrinkle -	8
Cable (Assom.)	7	Spring Bracket (Assem.)	7
Cable Clamps	1	Switch Cable	1
Condenser	1	Switch - Toggle (Assem.)	1
Contact Scraw Bridge (Assem.) -	6	Synchronous Motor	9
Cord - Power (Assem.)	7	Terminal Block (Assem.)	6,7
Covers	8	Tape Guides	8
Distributor Cover - Gray Wrinkle	8	Tape Reverse Magnet (Assem.)	6
Feed Lever (Assem.)	6	Tape Sensing Levers	2
Gear	9	Tape Stop (Assem.)	5
Gear Guard	1,2	Timing Ring Plate (Assem.)	4
Magnet (Assem,)	5	Transmitter Cover - Stainless Steel	8
Main Shaft (Assem.)	5	Transmitter Bracket (Assem.)	6
Main Shaft Bracket (Assem.)	3	Top Plate (Assem.)	2
Motor Arrangement "AJ"	9	Toggle Switch (Assem.)	1
Motor - Synchronous	9	Universal Contact (Assem.)	4
Name Plates	8		
Numerical Index	10		

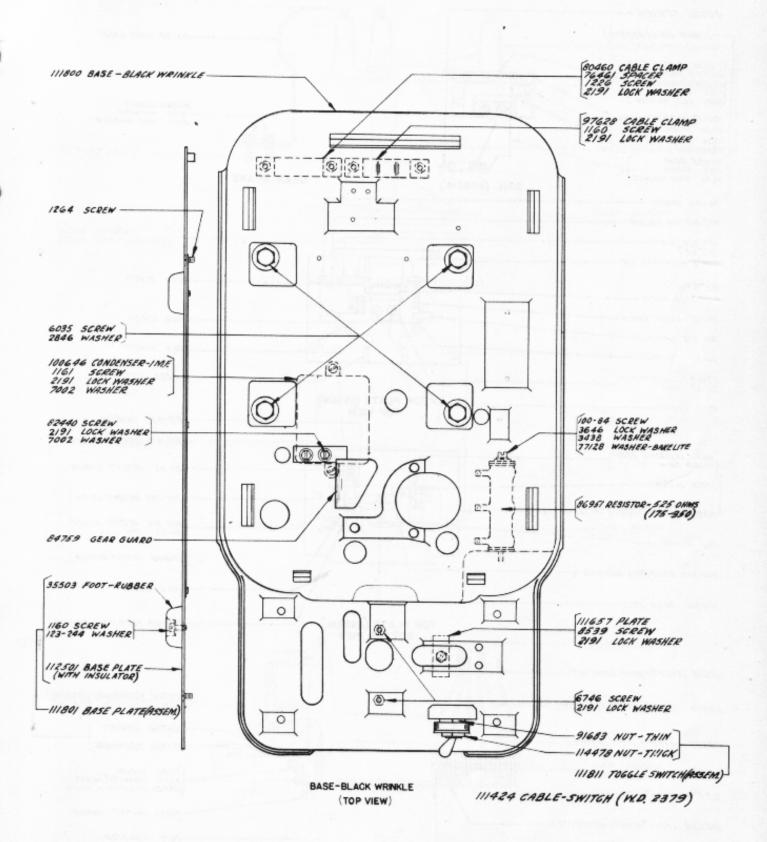


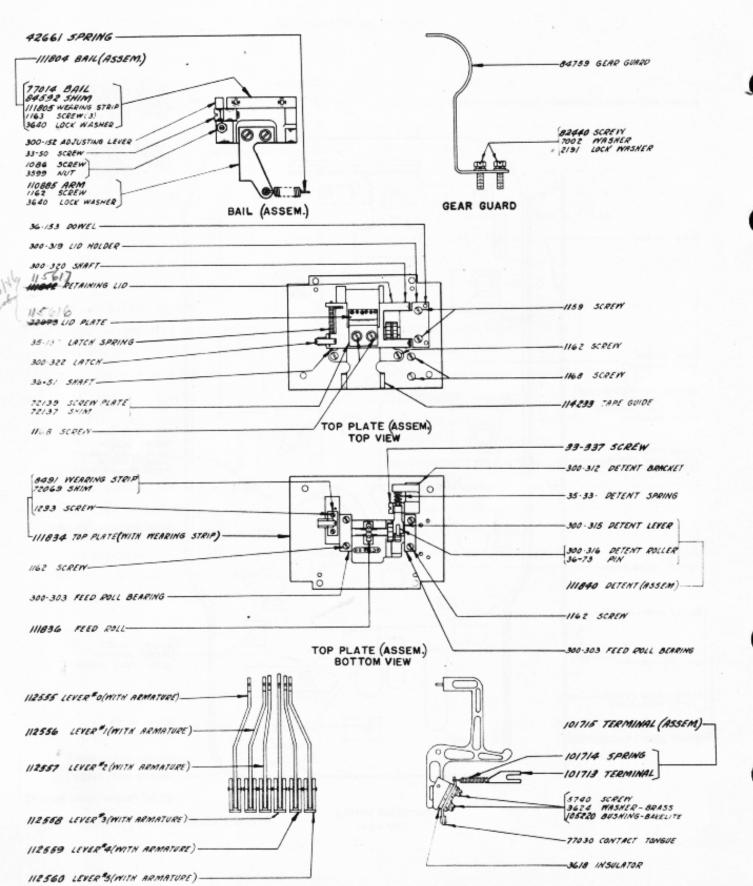



TAPE SENSING LEVERS

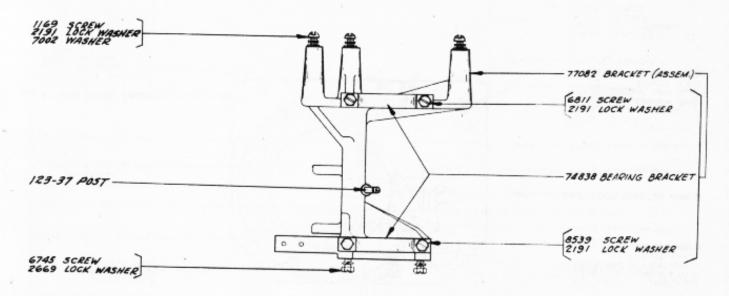


MAIN SHAFT BRACKET (ASSEM.)

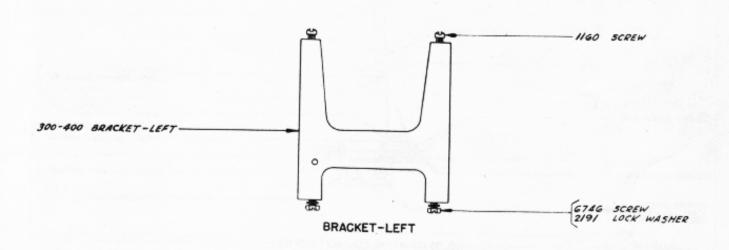

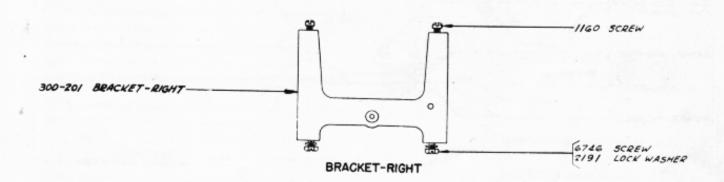


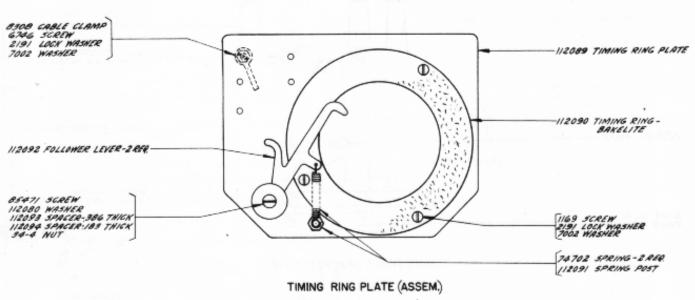


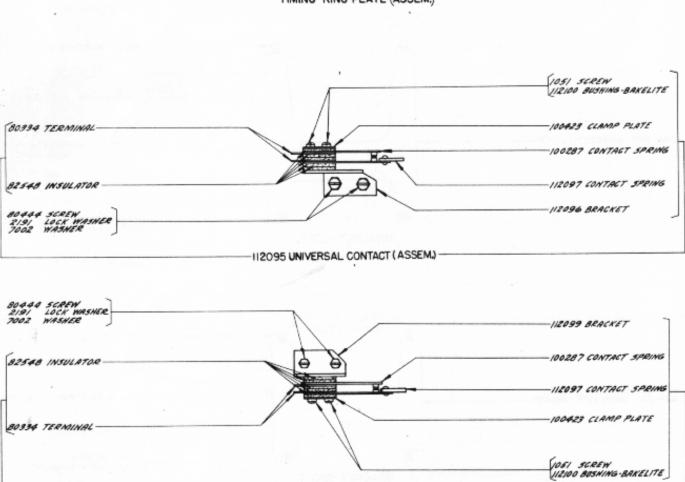



-112098 AUXILIARY CONTACT (ASSEM.)-




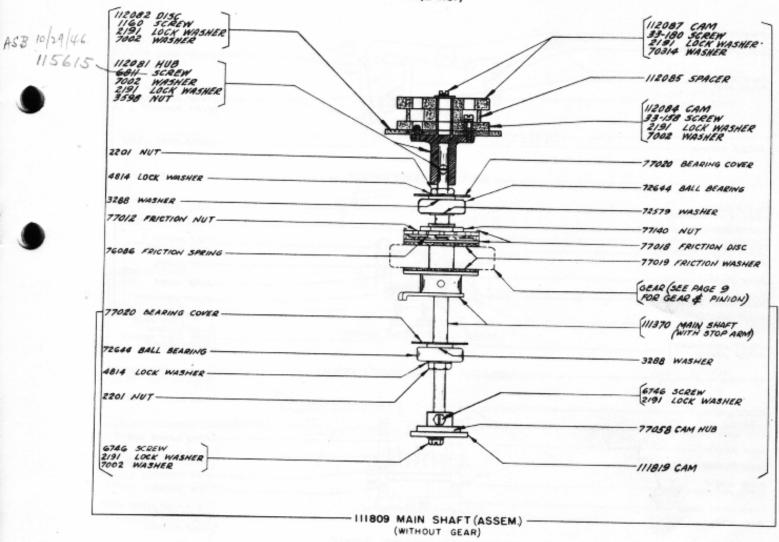

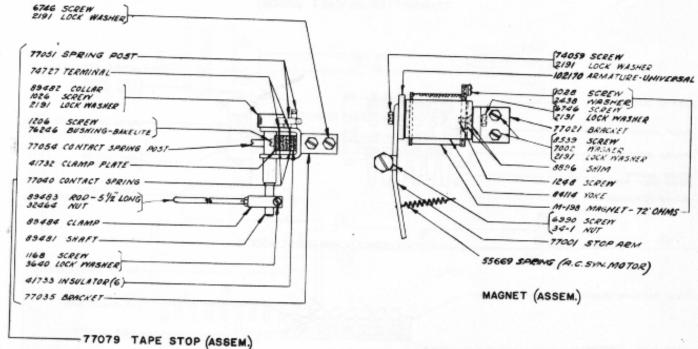

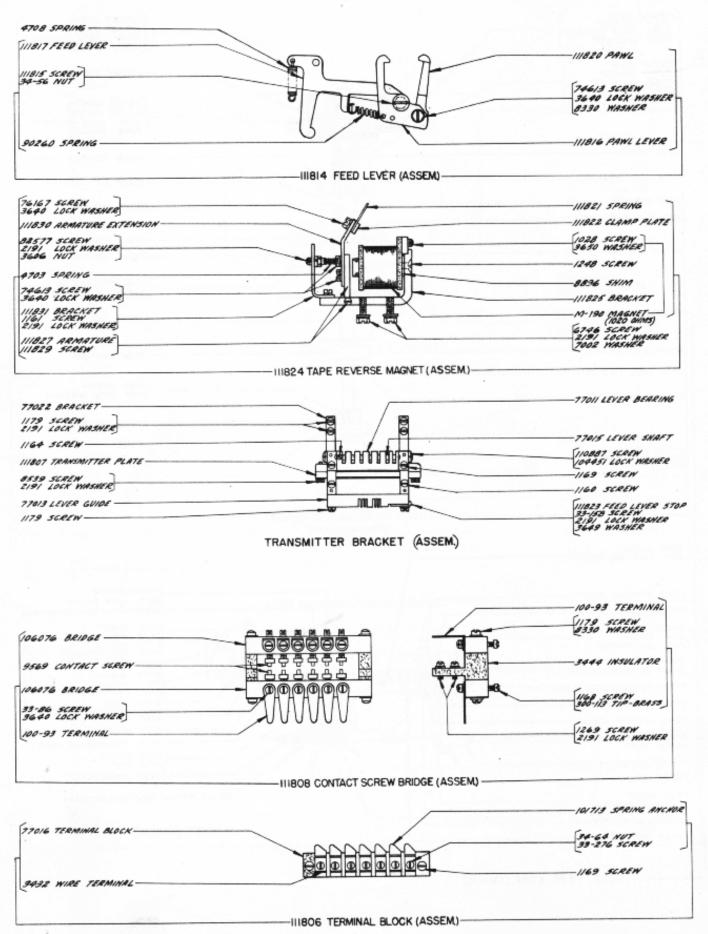


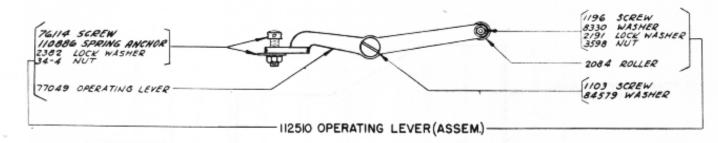

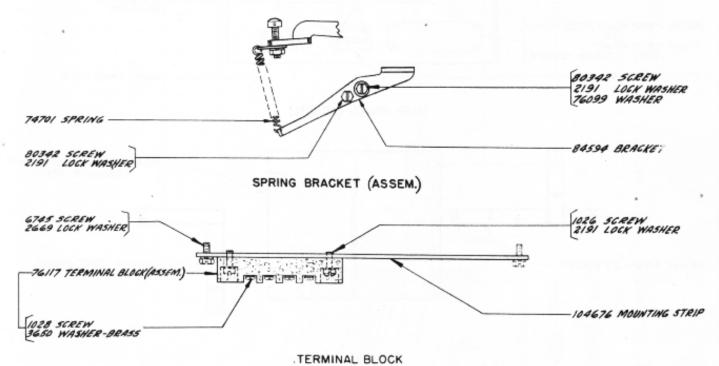





III8IO POWER CORD (ASSEM.)
INCLUDES II2078 PLUG AND 82474 TERMINALS
W.D.2379

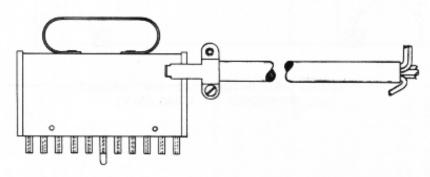



III845 CABLE (ASSEM)
INCLUDES 101976 PLUG AND 82474 TERMINALS
W.D.2379

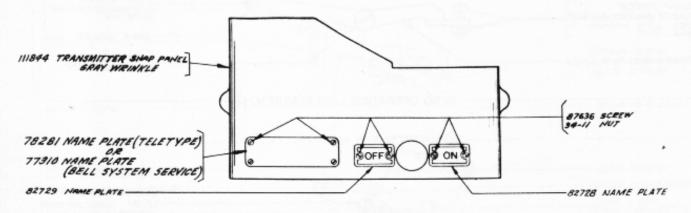

SNAP PANEL (ASSEM.)

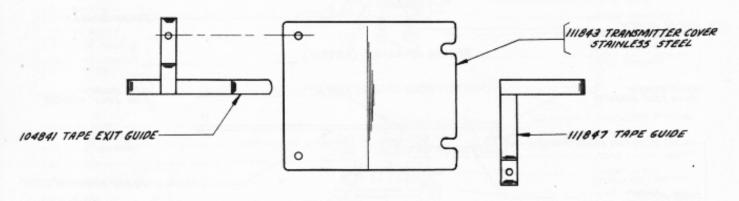

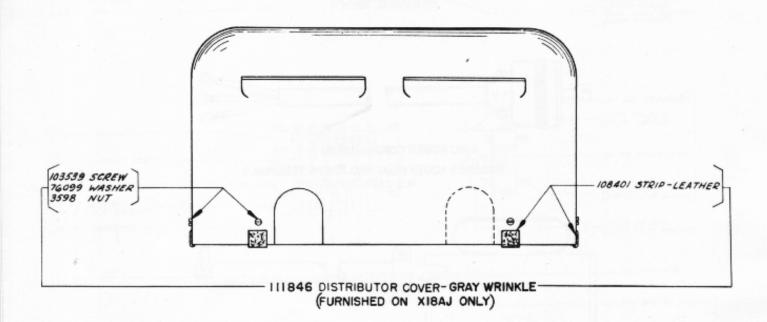

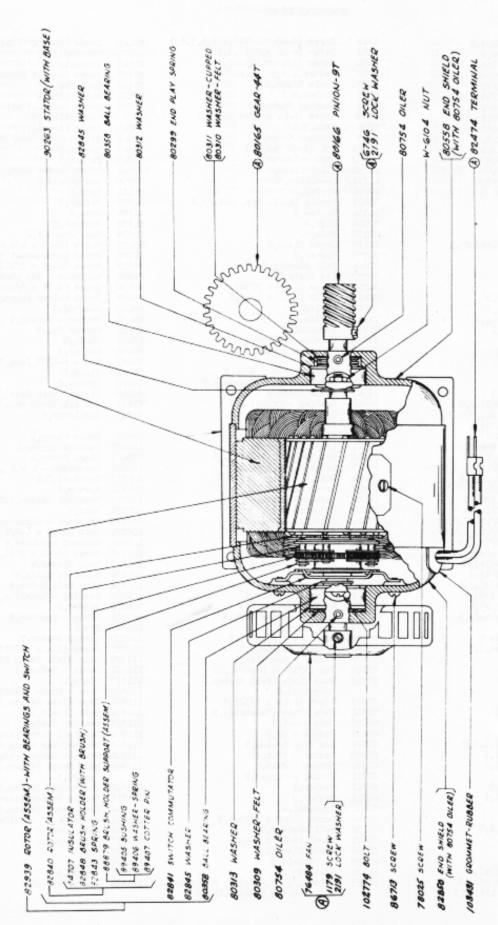

SYNCHRONOUS MOTOR

82283 MOTOR, 1/40 H.P., 110 V., 60 CYCLE A.C. (G.E. MODEL 5SH25AB11B)-EXCLUDES PARTS MARKED(A) 86707 MOTOR ARRANGEMENT "AJ", INCLUDES 82283 MOTOR AND PARTS MARKED (A)

NUMERICAL INDEX

M-190	Magnet - 1020 Ohms,6	6746	Screw (6-40 x 5/16),1,3,4,5,6,9	82440	Screw (6-40 x 7/16),1,2
M-198	Magnet - 72 Ohms, 5	6811	Screw (6-40 x 5/8),3,5	82474	Terminal, 7,9
W-6104	Nut (.164 - 36 Hex.),9	6990	Screw (1/4-32 Pilot),5	82548	Insulator,4
33-50	Screw (4-40 Shoulder),2	7002	Washer, 1,2,3,4,5,6		2-may (6 10 - 20/20) (
33-86	Screw (4-40 x 1/8),6	8308	Cable Clamp,4	82577	Screw (6-40 x 17/32),6
33-158	Screw (6-40 x 1/2),5,6	8330	Washer,6,7	82728	Name Flate, 8
33-180	Screw (6-40 x 1/2),5,6. Screw (6-40 x 15/16),5 Screw (3-48 x 5/16),6 Screw (4-40 Shoulder),2 Nut (1/4-32 Hex.),5 Nut (10-32 Hex.),4,7 Nut (2-56 Hex.),8 Nut (4-40 Hex.),6 Nut (3-48 Square),6 Detent Spring,2	8491		82729	Name Plate, 8
	Some (2.10 × 5/16),5	0530	Wearing Strip,2	82839	Rotor (Assem.) with bearings
33-276	Screw (3-48 X 3/10),6	8539	Screw (6-40 x 1/2),1,3,5,6		and Switch, 9
33-337	Screw (4-40 Shoulder),2	8896	Shim,5,6	82840	Rotor (Assem.),9
34-1	Nut (1/4-32 Hex.),5	9569	Contact Serew,6	82841	Switch Commutator,9
34-4	Nut (10-32 Hex.),4,7	32464	Nut (5-40 Hex.),5	82843	Spring,9
34-11	Nut (2-56 Hex.),8	35503	Foot - Rubber.1	82845	Washer.9
34-56	Nut (4-40 Hex.).6	41732	Clamp Flate.5		
34-64	Nut (3-48 Square).6	41733	Insulator,5	82848	Brush Holder (with brush),9
35-33	Detent Spring 2	42661		82850	End Shield,9
35-137	Intoh Samina 2	55660	Spring,2	84114	Yoke,5
	macell obi riff's	23009	Spring (A. C. Syn. Motor),5	84579	Washer,7
36-51	Shaft,2	70314	Washer, 5	84592	Shim, 2
36-73	Pin,2	72069	Shim,2	84594	Bracket.7
36-153	Domel, 2	72137	Shim, 2	84759	Gear Guard, 1, 2
100-84	Screw (8-40 x 2-17/32),1	72139	Screw Flate,2	85471	Screw 10-32 x 1/2,4
100-93	Terminal,6	72579	Washer, 5	86707	
123-37	Post,3	72644	Ball Bearing,5		Wotor Arrangement "AJ",9
123-244	Washer, 1	72973	Lid Flate,2	86713	Screw (4-48 x 5/16),9
	Tip - Brass,6	71.050		86951	Resistor - 525 ohms (175-350),1
	Adduction I 2	74059		87636	Screw (2-56 x 3/16).8
	Adjusting Lever, 2	74613	Screw (4-40 x 1/4),6	88879	Brush holder Support (Assem.),9
300-201	Bracket - Right, 3	74701	Spring,7	89405	Bushing,9
300-303	Feed Roll Bearing, 2	74702	Spring,4	89406	Washer - Spring,9
	Terminal,6 Post,3 Washer,1 Tip - Brass,6 Adjusting Lever,2 Bracket - Right,3 Feed Roll Bearing,2 Detent Bracket,2 Detent Lever,2 Detent Roller,2 Lid Holder,2 Shaft,2 Latch,2 Bracket - Left,3 Screw (6-40 x 3/8),5,7	74727	Terminal, 5	89407	
	Detent Lever, 2	74838	Bearing Bracket, 3		Cotter Pin,9
300-316	Detent Roller,2	76086		89481	Shaft,5
	Id Holden 2	76000		89482	Collar,5
	Lid Holder, 2	76099	Washer, 7,8	89483	Rod - 5-1/2" long,5
	Shaft,2	76114	Screw, 10-32 x 9/16,7	89484	Clamp,5
300-322	Latch, 2	76117	Terminal Block (Assem.),7	90260	Spring,6
300-400	Bracket - Left,3	76167	Screw (4-40 x 3/16),6	90263	
1026	Screw (6-40 x 3/8),5,7	76246	Bushing - Bakelite,5		Stator (with Base),9
1028	Screw (4-40 x 1/4),5,6,7	76461	Spacer,1	91683	Nut (15/32-32 Hex.),1
1051	Screw (4-40 x 1/2),4			94707	Insulator,9
1086		76484	Fan, 9		
	Screw (4-40 x 3/8),2	77001	Stop Arm, 5	97628	Cable clamp, 1
1103	Screw (3/16-40 Shoulder),7	77011	Lever Bearing,6	100287	Contact spring,4
1159	Screw (4-40 x 3/8),2	77012	Nut (9/16-32 Special),5	100623	Clamp Plate,4
1160	Screw (6-40 x 5/16),1,3,5,6	77013	Lever Guide.6	100616	Condenses, A
1161	Screw (6-40 x 1/4),1,6	77014	Lever Guide,6 Bail,2 Lever Shaft,6 Terminal Block,6 Friction Disc,5 Friction Washer,5	100040	Condenser - 1 M.F.,1
1162	Screw (4-40 x 1/4),2		Town Chart f		Terminal, 2,6
1163	Screw (4-40 x .188),2	77015	Lever Shalt,o	101714	Spring, 2
		77016	Terminal Block,6	101715	Terminal (Adsem.),2
1164	Screw (2-56 x 3/16),6	77018	Friction Disc,5	101976	Plug.7
1168	Screw (4-40 x 5/16),2,5,6	77019	Friction Washer.5	102170	Armature - Universal,5
1169	Screw (6-40 x 7/16),3,4,6	77020	Bearing Cover. 5	102276	Bolt (8-36 x 4-3/8),9
1179	Screw (6-40 x 5/8),6,9	77021	Bracket. 5	102/21	BOLU (6-30 X 4-3/8), 9
1196	Screw (6-40 Shoulder),7	77022	Friction Disc,5 Friction Nasher,5 Bearing Cover,5 Bracket,5 Bracket,6 Contact Tongue,2 Bracket,5 Contact Spring,5 Operating Lawer,7 Spring Post,5	103431	Grommet - Rubber,9
1206	Screw (4-40 x 9/16),5	77030	Contact Tonava 2	103539	Screw (6-40 x 3/8),8
1226	Screw (6-40 x 3/4),1	77036	Personal f	104451	Lock Washer, 6
1248		77035	Bracket,5	104676	Mounting Strip.7
	Screw (6-40 x 1/2),5,6	77040	Contact Spring,5	104841	Tape Exit Guide, 8 Bushing - Bakelite, 2 Bridge, 6
1264	Serew (10-32 x 1/2),1	77049	Operating Lever, 7	105220	Bushing - Bakelite 2
1269	Screw (6-40 x 1/2),6	77051	Spring Post,5	106076	Bridge,6
1293	Screw (4-40 Special),2	77054	Contact Spring Post,5	108401	Strip - Leather, 8
2084	Roller,7	77058	Cam Hub,5	110005	Ame 2
2191	Lock Washer.1 to 9	77079	Tape Stop (Assem.),5	110885	Arm, 2
2201	Nut (5/16-32 Hex.),5	77082	Branchet (Asses) 2	110886	Spring Anchor,7
2382	Lock Washer,7		Bracket (Assem.),3	110887	
2438	Washer, 5	77128	Washer - Bakelite,1	111370	Main Shaft (with Stop Arm).5
2669		77140	Nut (9/16-32 Special),5	111424	Cable - Switch.1
	Lock Washer, 3,7	77310	Name Flate (Bell System	111657	Plate,1
2846	Washer,1		Service),8	111800	Base - Black Wrinkle,1
3288	Washer, 5	78025	Screw (4-48 x 7/32),9	111801	Base Plate (Assem.),1
3432	Wire Terminal,6	78281	Name Plate (Teletype),8	222001	Date (Assem.),I
3438	Washer, 1	80165	Gear - 44T.9	222004	Bail (Assem.),2
3444	Insulator,6	80166		111802	Wearing Strip, 2
3598	Nut (6-40 Hex.),5,7,8		Pinion - 9T,9	111806	Terminal Block (Assem.),6
3599	Nut (A-LO Hay) 2	80299	End Play Spring,9	111807	Transmitter Plate,6
	Nut (4-40 Hex.),2	80309	Washer - Felt,9	111808	Contact Screw Bridge (Assem.),6
3606	Nut (6-40 Hex.),6	80310	Washer - Felt,9	111809	Main Shaft (Assem.) (without
3618	Insulator, 2	80311	Washer - Cupped, 9		cear) 5
3624	Washer - Brass, 2	80312	Washer, 9	111010	gear),5
3640	Lock Washer, 2,5,6	80313	Washer, 9	111010	Power Cord (Assem.),7
3646	Lock Washer, 1	80334	Terminal,4	111911	Toggle Switch (Assem.),1
3649	Washer, 6		Samue (6 10 - 22//1) =	111814	Feed Lever (Assem.).6
3650	Washer - Brass,6,7	80342	Screw (6-40 x 23/64),7	111815	Screw (4-40 Shoulder).6
4703		80358	Ball Bearing,9	111816	Pawl Lever,6
	Spring,6	80444	Screw (6-40 x 1/4),4	111817	Feed Lever,6
4708	Spring,6	80460	Cable Clamp,1	111819	
4814	Lock Washer, 5	80558	End Shield,9	111820	Pawl A
5740	Screw (2-56 x 1/4),2	80754	Oiler,9	111020	Comton 6
6035	Screw (1/4-20 x 5/8),1	82283		111821	Spring,6
6745	Screw (10-32 x 1/2),3,7		Motor 1/40 H.P. 110V, 60 Cycle AC,	111822	Clamp Plate,6
			(G.E. Model 5SH25AB11B),9		

NUMERICAL INDEX

111823	Feed Lever Stop,6	111847	Tape Guide, 8	112096	Bracket,4
111824	Tape Reverse Magnet (Assem.),6	112078	Plug.7		Contact Spring.4
111825	Bracket,6	112080	Washer, 4	112098	Auxiliary Contact (Assem.),4
111827	Armature,6	112081	Hub.5	112099	Bracket,4
111829	Screw (4-40 Special),6	112082	Disc.5	112100	Bushing.4
111830	Armature Extension,6	112084	Cam. 5	112501	Base Plate (with insulator).1
111831	Bracket,6	112085	Spacer,5		Operating Lever (Assem.),7
111834	Top Plate (with wearing strip),2	112067	Cam, 5		Lever #0 (With Armature),2
111836	Feed Roll,2	112089	Timing Ring Plate,4		Lever #1 (With Armature),2
111840	Detent (Assem.),2	112090	Timing Ring,4	112557	Lever #2 (With Armature),2
111842	Retaining Lid,2	112091	Spring Post,4		Lever #3 (With Armature),2
111843	Transmitter Cover - Stainless Steel, 8	112092	Follower Lever,4	112559	Lever #4 (With Arnature),2
111844	Transmitter Snap Panel - Gray	112093	Spacer386 Thick,4		Lever #5 (With Armature),2
	Wrinkle,8	112094	Spacer183 Thick,4	114233	
111845	Cable (Assem.),?	112095	Universal Contact (Assem.),4	114478	Nut (15/32-32 Hex.).1
111846	Distributor Cover - Gray Wrinkle,8				